

Manual Supplement


Manual Title: 1745 Users
Part Number: 2560366
Print Date: April 2006
Revision/Date: 1, 7/06

Supplement Issue: 5
Issue Date: 3/11
Page Count: 4

This supplement contains information necessary to ensure the accuracy of the above manual.

Change #1

On page 4, add the following symbol to Table 1:

	Do not apply around or remove from the Hazardous Live conductors.
---	---

On page 7, replace Table 3 with:


Table 3. Optional Accessories

Description	Model or Part Number
i1A/10A CLAMP PQ4, 4-PHASE 1A/10A MINI CURRENT CLAMP SET FOR PQ	3024424
i5A/50A CLAMP PQ3, 3-PHASE 5A/50A MINI CURRENT CLAMP SET FOR PQ	3024436
i5A/50A CLAMP PQ4, 4-PHASE 5A/50A MINI CURRENT CLAMP SET FOR PQ	3024449
i20/200A CLAMP PQ3, 3-PHASE 20A/200A MINI CURRENT CLAMP SET FOR PQ	3024451
i20/200A CLAMP PQ4, 4-PHASE 20A/200A MINI CURRENT CLAMP SET FOR PQ	3024460
3000/6000A-TF-4, 3000A/6000A 4-PH 36-INCH THIN FLEXI SET	3889395
i1A/10A CLAMP PQ3, 3-PHASE 1A/10A MINI CURRENT CLAMP SET FOR PQ	3024413
1-PHASE 1A/10A MINI CURRENT CLAMP SET FOR PQ	3345753
1-PHASE 5A/50A MINI CURRENT CLAMP SET FOR PQ	3345766
FS17XX-1PH-TF, 3000A 1PH FLUKE 1735 & 174X THIN FLEXI	3889429
FS17XX IP65-TF, 3000A IP65 4-PH FLUKE 1743/4 THIN FLEXI SET	3889418
C435 Hardcase	2654865

Change #2

On page 16, under **Connecting the Logger** add the following text and Figure:

- **To avoid shock or personal injury, keep fingers behind the tactile barrier, see the figure.**

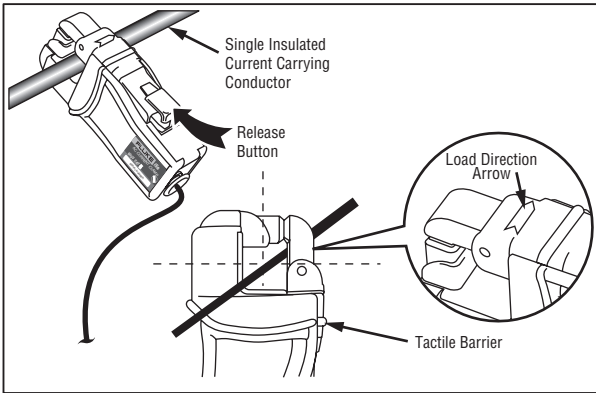

cab01f.eps

Using the Optional Microclamps

Change #3

On page 7, Table 2, change the following:

From:

Power Cord	2715492
------------	---------

To:

Power Cord	3007677
------------	---------

Change #4

On page 7, Table 2, change the following:

From:

Shielded 4 Phase Flexi Set (15 A/150 A/1500 A/3000 A)	FS17XX
--	--------

To:

FS17X5-TF, 3000A 4-PH FLUKE 1735 & 1745 THIN FLEXI SET	3889407
---	---------

Add the following to Table 2:

VL1735/45, Banana 4-Phase Voltage Lead Set for Fluke-1735/45	3276205
---	---------

Change #5, 57885

On page 45, under ***Environmental Specifications***, following Safety add:

Altitude 2000 m

Change #6

On page 18, following the Note, add:

Operating Instructions

1. Connect the Probe to the 1735 via the current input socket.
2. Wear protective equipment or de-energize the circuit and place the Probe around the conductor under test. To lock the coil, see the Figure.
3. Re-energize the circuit.
4. Observe and take measurements as required. Positive output indicates that the current flow is in the direction shown by the arrow on the Probe.
5. Wear protective gloves or de-energize the circuit before removal of the Probe.

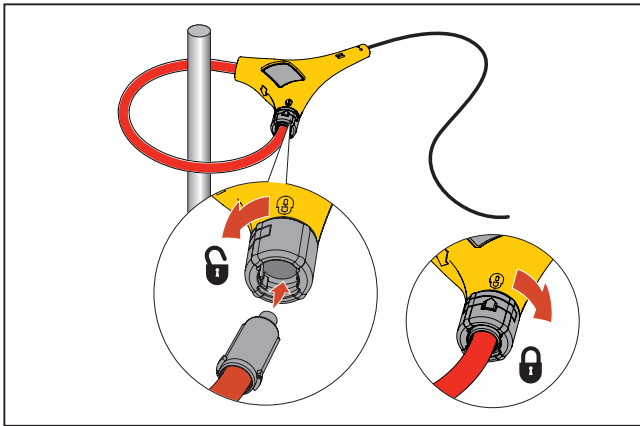


fig1.eps

Locking the Coil